


Eta Swiss Technology

Instructions for use Chronograph


VAL 7750 - 7760

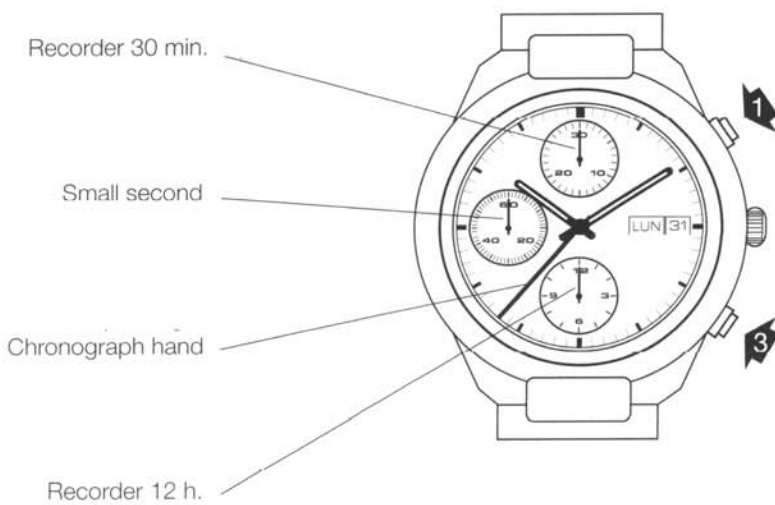

PUSHERS

- 1) Starting of chronograph
- 2) Stopping of chronograph
- 3) Reset-to-zero of chronograph

Crown with 3 positions

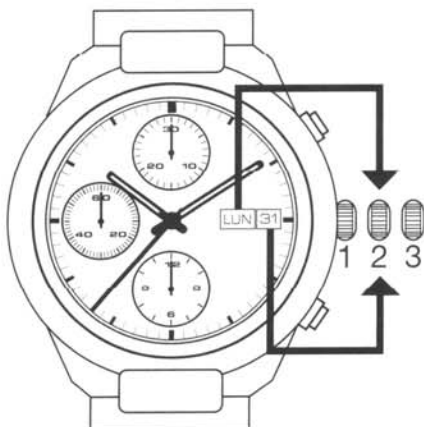

- 1) Position for winding
- 2) For rapid date correction, by turning in the winding direction.
Attention : Date correction impossible between 20 h and 2 h.
For rapid day correction, by turning contrary to the winding direction.
- 3) Position of handsetting, stop second.
For precise setting its recommended to pass beyond the desired minute and to set the hand backwards.