



PRESENTATION

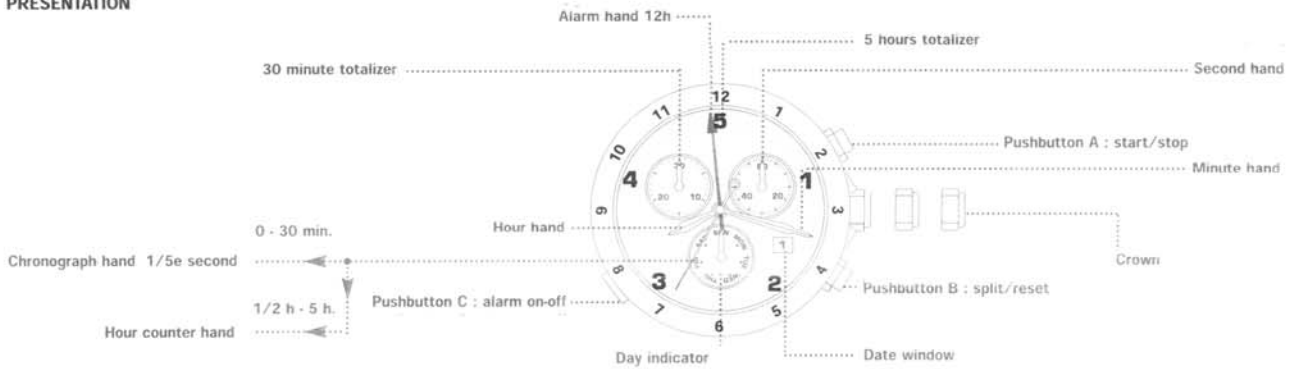


SETTINGS

**SETTING THE TIME
HOUR AND MINUTE**

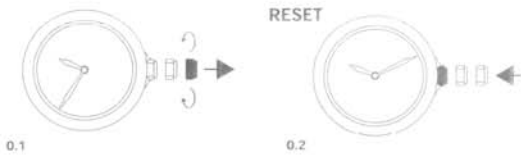

TO CORRECT THE DAY

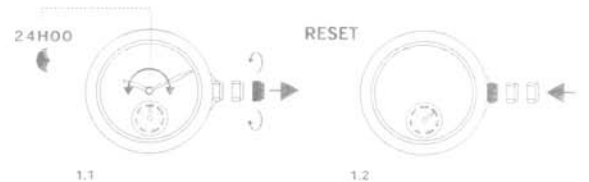

**SETTING THE DATE
CAUTION: NEVER CORRECT DATE
BETWEEN 21H00 AND 0H30.**




ALARM SETTING




CHRONO FUNCTIONS


**CHRONOGRAPH
UP TO 30 MIN.**

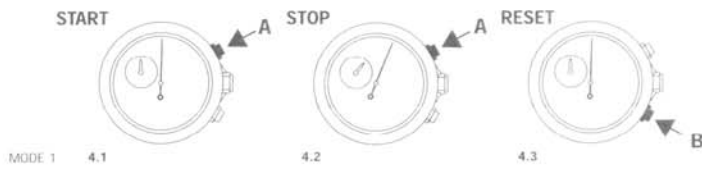

**CHRONOGRAPH
AFTER 30 MIN.**

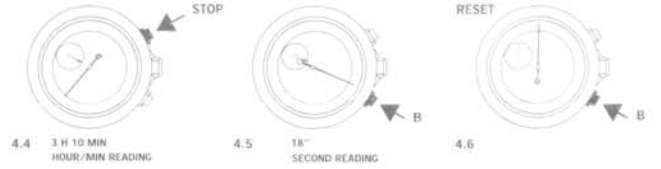

**MEASURING SPLIT
TIMES
UNDER 30 MIN.**

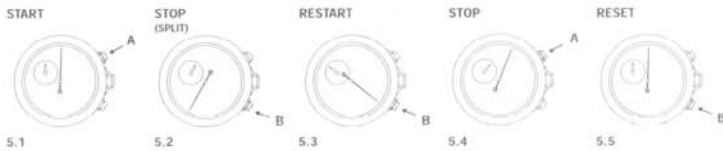

NOTE: THE CONTINUOUS SECOND MODE CAN BE STOPPED BY PRESSING THE PUSHER B. A SECOND PRESSED OF THE PUSHER B PUTS THE HAND BACK ON THE HOUR METER. WITHOUT THIS SECOND PRESSED, THE HAND GETS BACK AUTOMATICALLY ON THE HOUR METER AFTER 30 MINUTES.

CHRONO CALIBRATION

AFTER BATTERY EXCHANGE OR MISHANDLING ONLY

TO RESET CHRONOGRAPH,
MINUTE AND SECOND CHRONOGRAPH

